


 Maximo Evolution active	 Maximo Evolution Dynamic	 Maximo Dynamic	 Maximo Professional	Maximo Comfort	Maximo Basic
<b>STANDARD FEATURES</b>						
Article no. with fabric	1169172 (Standard*) 1206749 (Fendt)	1153460 (Standard*) 1189900 (Fendt) 1189900 (Same)	1189516	1201944	1201937	140487
Article no. with imitation leather					1201942	
Document box	●	●	●	○	○	○
APS (Automatic Positioning System)	●	●	●	●		
<b>Armrests</b>						
Height-adjustable, folding	●	●	●	●	●	●
65 mm x 270 mm					●	●
60 mm x 380 mm, adjustable angle				●		
80 mm x 380 mm, adjustable angle			●			
80 mm x 380 mm, adjustable angle, with fabric	●	●				
<b>Shock absorber</b>						
Automatic	● * (1)	●	●			
Adjustable				●		
Non-adjustable					●	●
20 ° rotary adapter	●	●	●	●		
<b>Suspension</b>						
Mechanical suspension						●
Pneumatic suspension with 12 Volt compressor	●	●	●	●	●	
Low-frequency suspension				●		
Dynamic Damping System		●	●			
Electronic active controlled suspension (EAC)	●					
<b>Suspension stroke</b>						
100 mm				●	●	●
120 mm	●	●	●			
<b>Weight adjustment (50 - 130 kg range)</b>						
Active (electronic)	●					
Automatic		●	●	●		
Manually					●	●
<b>Height adjustment</b>						
80 mm stepless (pneumatic)	●	●	●	●	●	
60 mm 3-step (manually)						●
<b>Climate system</b>						
Active	●	●				
Passive			●			
Fore/aft adjustment 210 mm	●	●	●	●	●	●
Fore/aft isolator	●	●	●	●	●	●
<b>Lumbar support</b>						
Pneumatic	●	●	●			
Mechanical				●	●	●
Adjustable backrest angle	●	●	●	●	●	●
Integrated backrest extension	●	●	●	●	○	○
Lateral suspension	●	●	●	○	○	○
Seat cushion width	550 mm	550 mm	550 mm	530 mm	520 mm	480 mm
Seat heating	●	●	●	○	○	○
Adjustable seat cushion length and angle	●	●	●	●		
Operator presence switch (OPS)	●	●	○	○	○	○
<b>OPTIONAL FEATURES</b>						
Operator restraint system	○	○	○	○	○	○

● Standard ○ Optional

\* Version with OPS 0/22 Ω

\* (1) preselection of suspension characteristic

**Important note:**

GRAMMER provides no guarantee of any seat's suitability for use in a particular vehicle. Before installing, the conditions in each case must be checked.